

ケーブル	メーカー	対応カメラ
MIOPS-C-C1	CANON	EOS 10D, EOS 1D, EOS 1DC, EOS 1D mkII, EOS 1D mkIII, EOS 1DmkIII, EOS 1Dmk IV, EOS 1DX, EOS 1Ds, EOS 1DsmkII, EOS 1DsmkIII, EOS 20D, EOS 20Da, EOS 30D, EOS 40D, EOS 50D, EOS 5D, EOS 5DmkII, EOS 5DmkIII, EOS 6D, EOS 7D, EOS D30, EOS D60, EOS 7DmkII, EOS 5DSR, EOS 5DS, EOS 8000D, EOS 1DXmkII, EOS 80D, EOS 5DmkIV, EOS 6DmkII, EOS R
MIOPS-C-C2	CANON	EOS 60D, EOS 70D, Kiss Digital, Kiss F Digital, Kiss N, Kiss X2, Kiss X2, Kiss X3, Kiss X4, Kiss X5, Kiss X50, Kiss X6, PowerShot G1 X, PowerShot G10, PowerShot G11, PowerShot G12, PowerShot G15, PowerShot G16, PowerShot SX50 HS, Kiss X7, Kiss X70, Kiss X7i, EOS 8000D, kiss X8i, kiss X80, Kiss X9i, EOS 9000D, EOS M2, EOS M3, EOS M5, EOS M6
	FUJIFILM	X-E1, X-E2, X-T10, X-T20, X-T3
	HASSELBLAD	H, H3D, H4D-200MS, H4D-31, H4D-40, H4D-50, H4D-50MS, H4D-60
	SAMSUNG	GX-1L, GX-1S, GX-20, NX-10, NX-100, NX-11, and NX-5
	OLYMPUS	E-M1MarkII
	PENTAX	645D, 645Z, ist D, ist DL, ist DL2, ist DS, ist DS2, K-3, K-30, K-5, K-5 II, K-5 IIs, K-50, K-500, K-7, K10 Grand Prix, K100D, K100D Super, K10D, K110D, K200D, K20D, MZ-6, MZ-L, and ZX-L, K-S2, K-3 II, K-70, K-1, KP
MIOPS-C-N1	NIKON	D1, D100, D1H, D1X, D2, D200, D2H, D2HS, D2X, D2XS, D3, D300, D300S, D3s, D3X, D4, D4s, D700, D800, D800E, D810, D5, D500
MIOPS-C-N3	NIKON	Coolpix P7800, D3100, D3200, D5000, D5100, D5200, D5300, D600, D610, D750, D7000, D7100, D90, D3300, Df, D7200, D5600, D3400, D7500, Z6, Z7
MIOPS-C-S1	HASSELBLAD	HV
	SONY	A100, A200, A300, A33, A35, A350, A37, A400, A450, A500, A55, A550, A550V, A560, A57, A580, A65, A65V, A700, A77, A77V, A77 II, A850, A900, A99, A99 II
MIOPS-C-S2	SONY	A58, A6000, A7, A77 II, A7R, A7S, HX300, HX50V, NEX 3N, RX10, RX10II, RX10III, RX10IV, RX100II, RX100III, RX100IV, RX100V, RX100VI, A7II, A7RII, A7SII, A6300, A6500, A9, A7III, A7RIII
MIOPS-C-P1	PANASONIC	Ft 2, FZ100, FZ15, FZ150, FZ20, FZ200, FZ30, FZ50, G1, G10, G2, G3, G5, G7, GF1, GH1, GH2, GH3, GH4, GX1, GX7, GX8, L1, L10, LC1, TS2, and G6, GH5
MIOPS-C-F1	FUJIFILM	Finepix S1, X-A1, X-M1, X-T1, XQ1, X-A2, X-A3, X-Pro2, X-T2, GFX 50S, X-100T, X-100F
MIOPS-C-O1	OLYMPUS	E-30, E-400, E-410, E-420, E-450, E-510, E-520, E-600, E-620, Evolt E-410, Evolt E-510, OM-D E-M1, OM-D E-M5, OM-D E-M10, PEN E-P1, PEN E-P2, PEN E-P3, PEN E-P5, PEN E-PL2, PEN E-PL3, PEN E-PL5, PEN E-PL6, PEN E-PL7, PEN E-PL8, PEN E-PM1, PEN E-PM2, SP-550, SP-560, SP-570, SP-590UZ, Stylus1, XZ-1, XZ-2, XZ-2 iHS, E-M5MarkII, OM-D E-M10 MarkII, PEN-F